

EasyFit Seat Cover Installation Instructions

For model numbers NP002, PV002, SP002

Always wear gloves to protect your hands from any sharp edges under seat and eye protection to protect from elastic straps that may snap back if suddenly released



PDF version of this document
autohq.com/pv002.aspx



More installation resources
autohq.com/install.aspx


Cover consists of 3 separate pieces. The sides marked as "front" are to be visible when installed. "Back" refers to the side that will be in contact with the seat.

| <p><u>Seat Bottom Cover</u> Has 6 elastic straps with metal hooks attached to them</p> | <p><u>Backrest Cover</u> Has 4 elastic straps, 2 with metal hooks and 2 with Velcro (short strap with "loop" and long strap with "hook")</p> | <p><u>Headrest Cover</u> Design varies by material</p> |
|---|---|--|
| | | <p><u>Leatherette</u> Has 2 nylon straps with plastic buckles</p> <p>- OR -</p> <p><u>Mesh and Neoprene</u> Slip-on design with Velcro straps inside</p> |

Step A - Prepare Your Seat

Seats do not need to be removed from vehicle in order to install seat covers. Photos are for illustration purposes only and may vary from your actual seats.

1. Raise seat bottom up as high as possible using controls on side of seat, if equipped with this feature. This will make it easier to reach underneath seat to install straps.
2. Raise headrest up as high as possible. It is usually not necessary to remove headrest.
3. Increase space in the gap between the backrest and seat bottom by tilting the backrest forward, in the direction of the vehicle's dashboard, as you would to allow a passenger into the backseat of a 2-door vehicle.
4. Check for presence of flaps that cover the gap between the backrest and seat bottom by viewing seat from behind, as a passenger would when sitting in the back seat. If the gap between the seat backrest and seat bottom is not visible, cannot be located by feeling around, or you cannot push your fingers from the front to the back through the gap, then your seat has a flap. Flap must be opened by unhooking or unclipping it from underneath seat bottom before cover can be installed and can be replaced once installation is complete. **Not all vehicles have these flaps.**

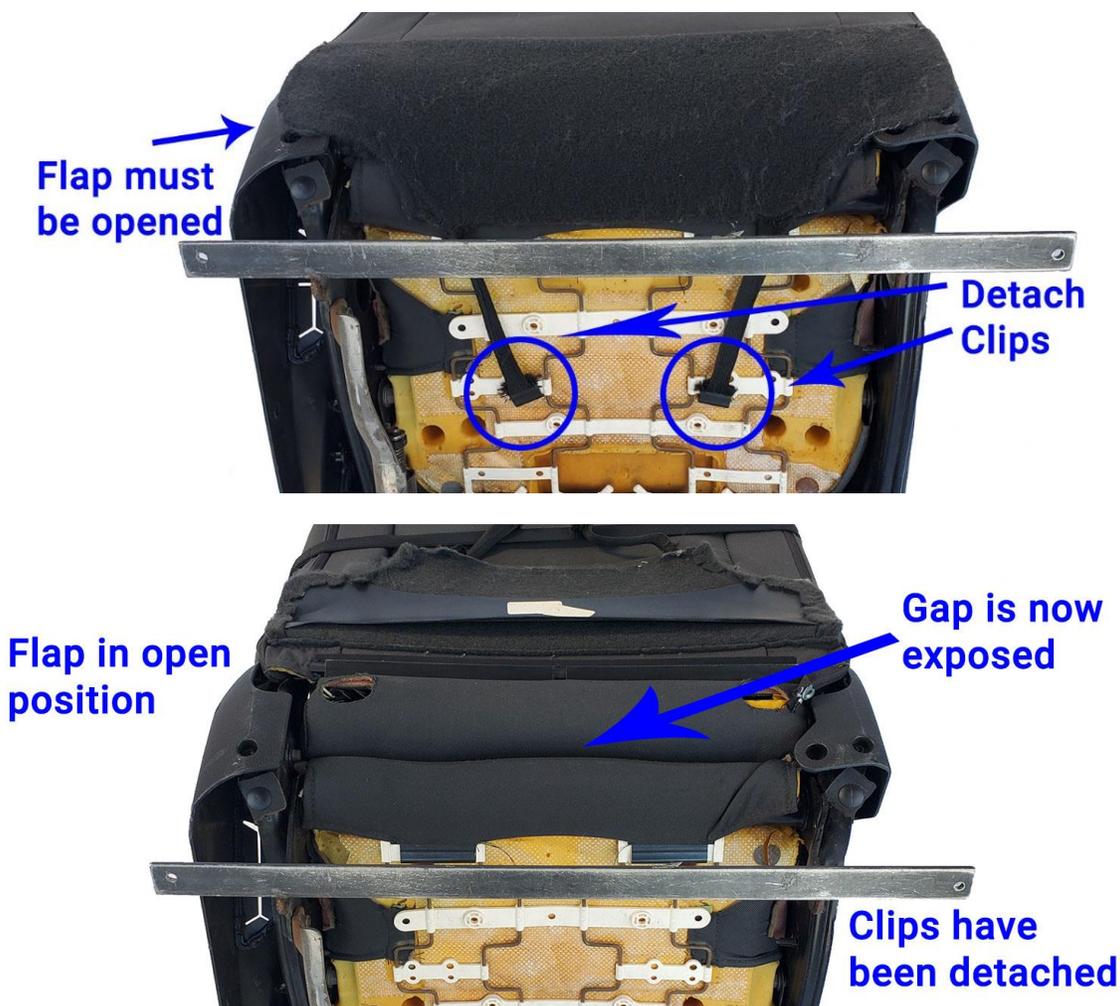

Step B – Install Seat Bottom Cover

1. Place seat bottom cover over seat with pockets facing the front of seat where your knees would be and straps "A" at the back.




2. Insert the 2 rear straps "A" through the gap with the backrest.

If gaps are too tight to insert straps: Remove hooks by sliding them off straps through the small opening in hooks. Push hookless straps through the gap, then reattach hooks to straps once accessible underneath the seat. Secure straps to springs on seat bottom underside. A thin piece of plastic such as a credit card can assist in pushing straps through tight spaces.



3. From behind the seat, hook straps "A" to springs on the underside of the seat bottom. *All* straps should be secured **above** any wiring, electric motors or rails, as close as possible to actual seat cushion itself, keeping straps as flat and parallel as possible to the vehicle's floorboard. (See photo in step C2 for example).

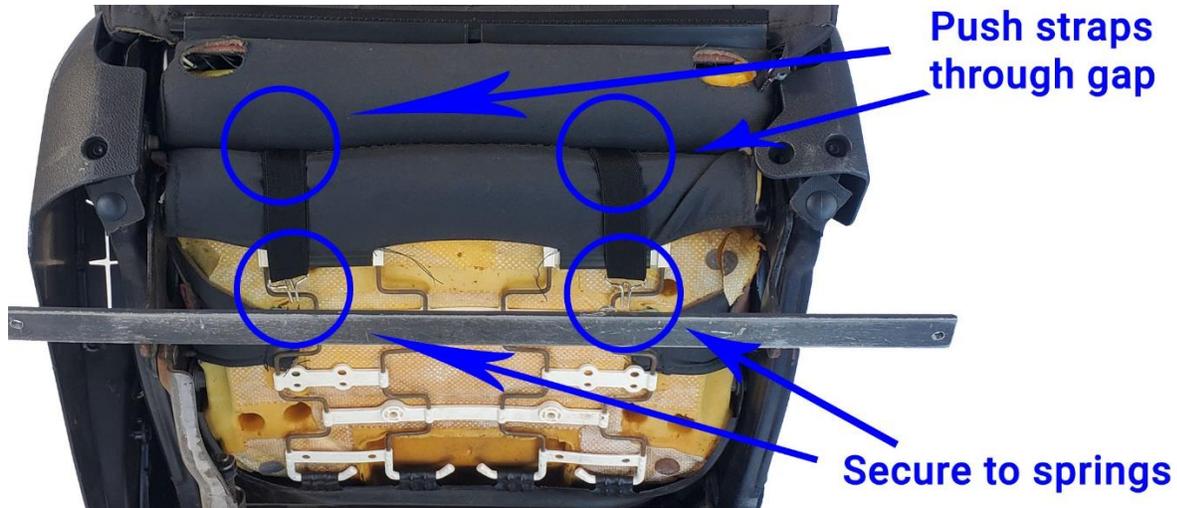

4. Attach the 2 front straps on pockets "B" to springs on the underside of seat bottom then connect the 2 side straps "C". Hooks can also be secured directly to any previously installed seat cover hooks. *Side straps "C" are designed to go between the seat cushion and plastic molding* leaving seat controls accessible, *not over the plastic molding*. If gap between cushion and plastic molding is too tight to insert strap, remove hooks from straps as detailed in step B2.



Step C – Install Backrest Cover

The EasyFit cover is not seat side specific, meaning it fits both driver and passenger side seats. The breakaway Velcro strap will not hinder airbag deployment regardless of the seat it is installed on.

1. Slip backrest cover over headrest, with headrest going through the slot in the cover. If cover will not fit over headrest, remove headrest from seat, slide cover on and then replace headrest. Attach the Velcro found between the headrest posts. For a flush look, tuck cover under the plastic around the headrest post openings.



If opening for headrest in cover is too small then removal of headrest is necessary


- Tab – Push tab on base of headrest post and while holding down, lift up on headrest. There may be tabs on both sides.
- Pin hole – Use a straightened paperclip to insert into small pin hole release on headrest base. Keep pressing on release button while lifting up on headrest.



2. Tuck 2 straps **"D"** with hooks through the gap between the backrest and seat bottom and attach to springs to underside of seat bottom (can also be secured to previously installed seat cover hooks). Hooks can be removed from strap by sliding them off and then reattaching once strap has been pushed through.



Total of 8 total straps will be secured to underside of seat bottom: 4 hooks near the gap, 2 in the front and 1 each on both the sides. Any open seat flaps (from step A4) can be reconnected at this time.

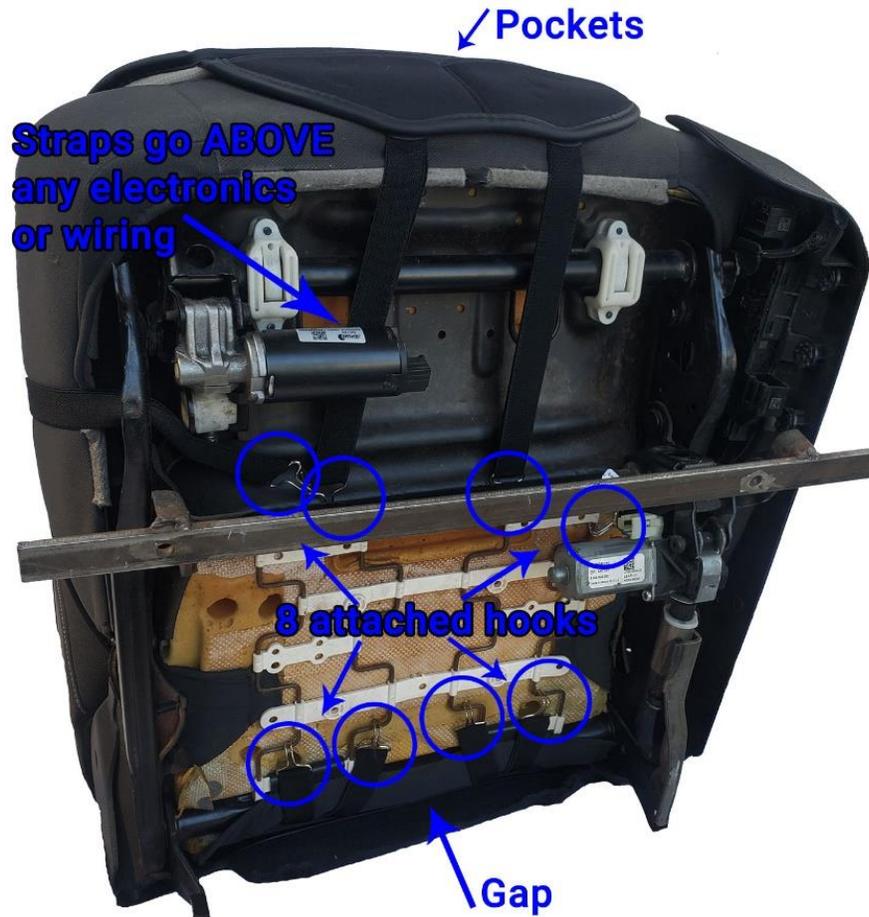

3. Attach horizontal strap "E" on back side of backrest to Velcro found on opposite side "F".



Step D – Install Headrest Covers

There are 2 styles of headrest covers, installation varies according to the material your EasyFit covers are made from.

LEATHERETTE - Fold cover over the headrest and attach buckles underneath headrest.



MESH AND NEOPRENE – Slip cover over headrest like a sock then attach Velcro straps.



Frequently Asked Questions

My covers came with markings / depressions / wrinkles on them, is this a defect? – This is perfectly normal. The markings are due to the covers being in the box used to ship to you. Like a mattress or a mattress pad that comes in a box, the markings will fade over time once the covers are installed. Markings fade faster in the summer when the interior of your vehicle is hotter.

My installed seat cover is not flush to the seat – No worries, seat cover will shape itself to seat over time as it is sat in.

Common Installation Issues

Nowhere to connect straps – Your seat covers have straps that are designed to hook/connect to the underside of your vehicle's seat bottom. If they are on the top, then the cover is upside down.

No opening to pass straps through to seat bottom – Many vehicles have flaps that cover the gap in the seat (where the back rest and seat bottom come together) that have to be opened to allow the seat cover straps access to the underside of the seat bottom. To do this, look for clips or hooks on the underside of the seat that hold the flap in place then unhook them so that the flap opens. Install the seat cover, pushing the straps through the gap of the seat and secure the seat cover's hooks to the underside of the seat. Finally, replace the flap clips on the underside of the seat.

Straps on front of seat bottom too short / straps keep loosening / slippage – Side straps must enter the gap between the seat bottom cushion and the plastic molding for a proper fit. Install straps above any rails or electric seat motors, that is, as close as possible to the underside of the seat bottom without looping over any of these parts. Clip or Velcro corresponding straps together and tension the straps as tight as possible by pulling them to pick up excess slack. Straps that are installed under an electric motor will eventually loosen with the readjusting of the seat position. Will not harm any seat electronics.

Controls on side of seat bottom are not accessible – Strap goes between the seat cushion and plastic molding, not over.

Leg extensions of sport seats do not extend – Only custom-made covers allow for leg extension movement.

Care and Cleaning - Varies by Material

Leatherette – Easy clean up by just wiping down with a damp cloth, Simple Green or leather cleaner for car interiors.

Mesh – Spot clean with water and mild soap.

Neoprene – Simply wipe down spills down with mild soap and water. For deeper cleaning, can be removed from vehicle and sprayed down or washed by hand with a mild detergent.

Still Need Help?

Call us at (888) 288-6471 x2 for assistance. Video call available through FaceTime, WhatsApp, Skype.

Happy with the results?

We'd love to see a photo! You can text to us at (619) 752-4584 or email to sales@autohq.com



We'd appreciate your positive review on Google: